

# iq

## LED TV

### USER MANUAL



**LED-5002SMT**



**IMPORTANT**

Please read this manual carefully before installing and operating the TV.  
Keep this manual handy for further reference

# Table Of Contents

<b>Safety Information</b> .....	1
<b>Important Safety Precautions</b> .....	2
<b>TV Buttons And Connections</b> .....	3
<b>External Device Connection Diagram</b> .....	3
<b>Install And Connect TV</b> .....	4
<b>TV Feet Installation Instructions</b> .....	4
<b>Bot Wizard</b> .....	5
<b>Inputs</b> .....	5
<b>Main Menu</b> .....	6
<b>Picture</b> .....	6
<b>Sound</b> .....	7
<b>Channel</b> .....	7
<b>Accessibility</b> .....	8
<b>Advanced</b> .....	8
<b>General</b> .....	9
<b>System</b> .....	10
<b>Network</b> .....	10
<b>Application</b> .....	11
<b>FileManager</b> .....	13
<b>Hotel</b> .....	12
<b>Help</b> .....	13
<b>Specifications</b> .....	14
<b>Remote Controller</b> .....	15

# Safety Information

## CAUTION


**RISK OF ELECTRIC SHOCK  
DO NOT OPEN**

High voltages are used in the operation of this product. to reduce the risk of electric shock, do not remove cover of the cabinet, refer servicing to qualified service personal

If the TV any changes or coarse adjustment, electric shocks to be hurt, do not attempt to open a machine-maintenance, customer contact centres needed overhaul.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating in the literature accompanying the appliance.

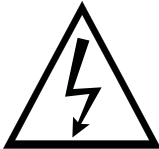


**Warning**  
The lightning flash with arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

# Important Safety Precautions


- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety, If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at Plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments /accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used caution when moving the cart/apparatus combination to avoid injury tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.



## Caution:

- 14) To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- 15) The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
- 16) The socket-out shall be installed near the equipment and shall be easily accessible.
- 17) This product should never be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacture's instructions have been adhered to.
- 18) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquid, such as vases, shall be placed on the apparatus.
- 19) Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- 20) Wall or Ceiling Mounting - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
- 21)  Never place the TV, remote control or batteries near naked flames or other heat sources, including direct sunlight. To prevent the spread of fire, keep candles or other flames away from the TV, remote control and batteries at all times.
- 22) The USB terminal should be loaded with 0.5 A under normal operation.

These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions, unless you are qualified to do so.

- 23) The battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- 24)  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth
- 25) The maximum using environment temperature is 45 degrees.  
The Maximum using altitude is 2000 meters

# TV Buttons And Connections

## TV Buttons

**Note:** The key instructions are subject to below.



**Display \ Hide key icon:** When there is no button icon popping up, press the key, the key icon will pop up like the picture shows above, the key icon will automatically turn off after 5 seconds of inactivity.

**Icon selection:** Short press the button, move the loop to the right, select the icon.


**Icon function selection:** Long press the key to achieve the function of the selected icon.

### Icon Description:



- : **Power off Icon:** Corresponding to the "POWER" button of remote .
- : **Menu Icon:** Corresponding to the "MENU" button of remote.
- : **Source Icon:** Corresponding to the "SOURCE" button of remote.
- : **CH+ Icon:** Corresponding to the "CH+" button of remote.
- : **CH- Icon:** Corresponding to the "CH-" button of remote.
- : **Volume+ Icon:** Corresponding to the "VOL+" button of remote.
- : **Volume- Icon:** Corresponding to the "VOL-" button of remote.

	<b>AV input</b> External AV Signal Input And Relevant Right/Left Sound Channel		<b>USB input</b> Connect a USB device here to play its media files or to record programs via the PVR function.
	<b>CI SLOT</b> The card reader input CI(common interface) this requires CAM (conditional access module) used for pay TV.		<b>OPTICAL</b> Connect the SPDIF receiver.
	<b>HDMI input</b> Digital signal input from HDMI video connector.		<b>RJ45</b> Connect the Internet.
	<b>ANT 75</b> Connect the antenna/cable tv input (75/VHF/UHF)		

## External device connection diagram

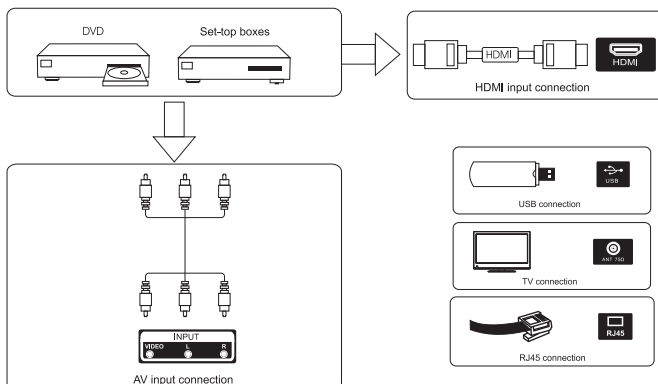

# Install and Connect TV

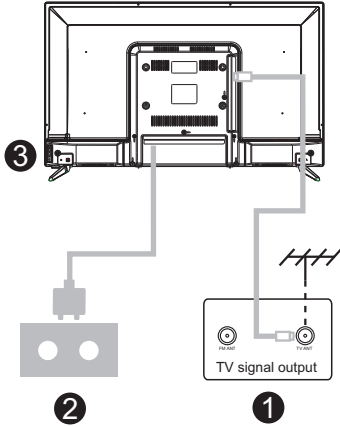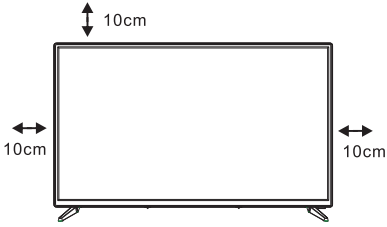

## Setup your TV

1. Put your TV in a place that can support the weight of the TV. To avoid danger, please do not assemble the TV near water or extreme heat (such as a furnace, light source, or candle.) Do not block the ventilation on the back of the TV.


## Connect signal source and power

2. Connect the antenna cable to the RF connection on the back or side of the TV, and/or the signal source HDMI cable to the HDMI input(s) on the rear or side of TV. Plug the TV into the wall power outlet (100-240V~ 50/60Hz).

## Turn on the TV

3. Connect the power supply, enter the standby mode (red light), press the power button of the TV or the power button on the remote control to turn on the TV.

Note: If the model has a CI card slot on its top, a silicone plug for the CI card slot can be found in the accessory bag (for models without CI card slot, there is no such silicone plug), please insert the silicone plug into the slot when the CI card is not in use.



## Note:


Picture for reference purposes only.

# TV Feet Installation Instructions

## Stand Installation Guide

The TV is packaged with the TV stand separated from the cabinet. To setup the TV table stand, please carry out the installation according to the instructions below.

1. The panel can be scratched easily, so please: Place a soft cloth on the table and place the TV face down on the cloth.  
Note: Always unplug the AC cord first when installing/removing the stand.
2. Take the base. Please align the screw holes of the base and the TV, and then insert the screws into the holes on the base and tighten them.  
Note: To ensure that the TV is stable, please lock all screws.  
The stand of some TV models is designed with snap-in type, easily installed by snapping into stand groove, instead of screw.

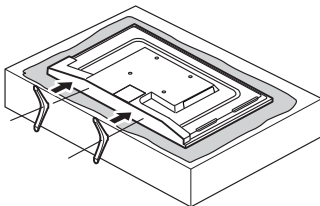

Please take note of the base direction:




The bottom view of the TV  
(Front cabinet faces down)


(The illustration is for reference only, Please prevail in kind)

## Suggestion:


To make it more convenient for base installation and to avoid any risk of scratches and damage, we advise you using the type of PH2 screwdriver.

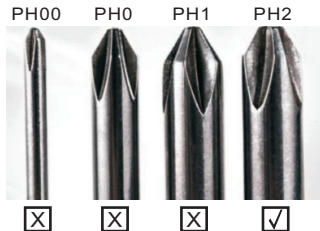

# Boot Wizard

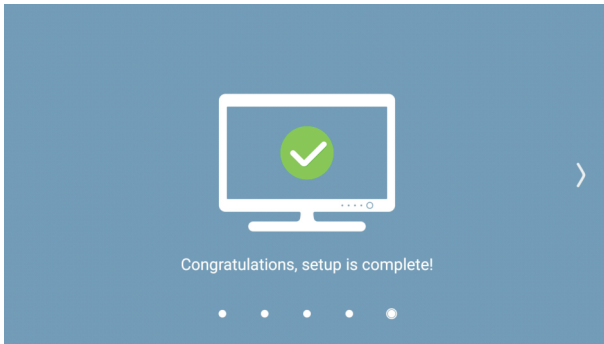

After the Boot Wizard setting completion , you can enter the SmartTV home interface.

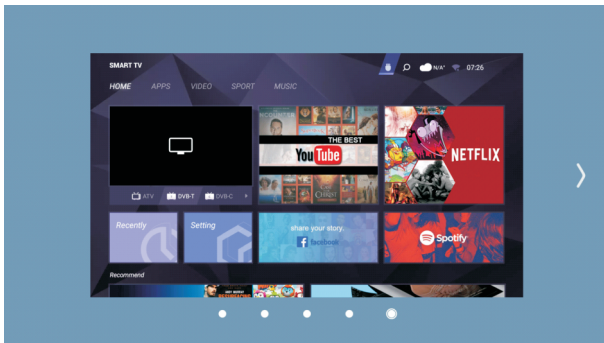


# Inputs

Press [SOURCE] button to open the input source list, then press [▲/▼] button to highlight an input and press[OK] button to switch.




# Main Menu

Press [MENU] button to open the main menu interface. Press [◀/▶] button to select the option then press [▼] button to enter the sub-menu. Then press [MENU] or [EXIT] to back to main-menu.

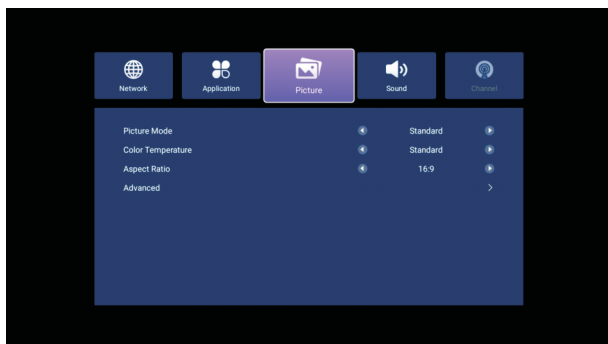

## Picture

Press [▲/▼] button to select the option then Press ◀ to decrease the parameter.  
Press ▶ to increase the parameter.

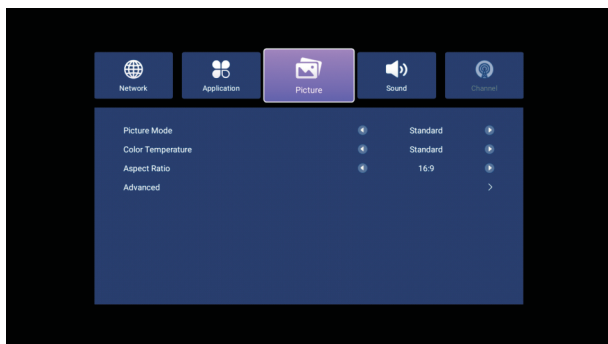

### Function Description:

**Picture Mode** Standard->Dynamic->Movie->Energy Saving->User

**Color Temperature** Standard -> Warm -> Cool

**Aspect Ratio** 16:9->4:3->Zoom1->Zoom2->Full->Auto

**Advanced**(select the Advanced option then press [OK/▶] button to enter the sub-menu).


NR->DLC->HDR->HDMI Mode (Available only in HDMI source.)



# Main Menu

## Sound

Press [▲/▼] button to select the option then Press ◀ to decrease the parameter.  
Press ▶ to increase the parameter.

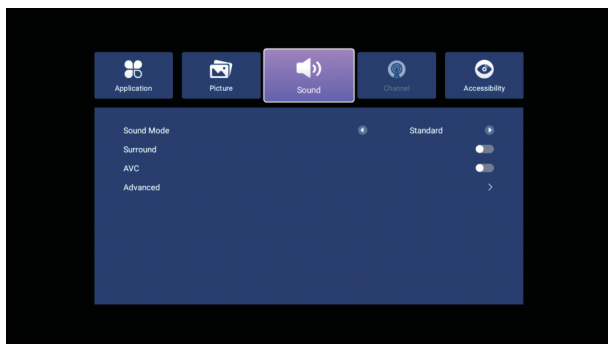

### Function Description:

**Sound Mode** Standard->Sport->Movie->Music->User

**Surround** OFF->ON


**AVC** OFF->ON

**Advanced**(select the Advanced option then press [OK/▶] button to enter the sub-menu).

Balance->Digital Output

## Channel

Press [▲/▼] button to select the option then Press [▶] button to enter the sub-menu.

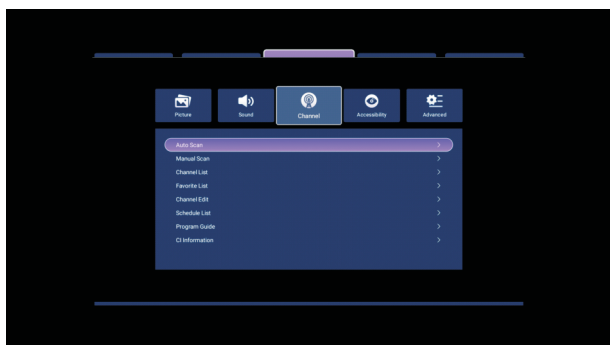


# Main Menu

## Function Description:

<b>Auto Scan</b>	Enter the auto tuning scan interface and start scan
<b>Manual Scan</b>	Enter the manual tuning scan interface
<b>Channel List</b>	Enter the channel list interface
<b>Favorite List</b>	Enter the favorite list interface
<b>Channel Edit</b>	Enter the channel edit interface
<b>Schedule List</b>	Enter the schedule list interface
<b>Program Guide</b>	Enter the program guide interface
<b>CI Information</b>	Enter the CI information interface

## Accessibility

Press [▲/▼] button to select the option then Press ◀ to decrease the parameter.  
Press ▶ to increase the parameter.

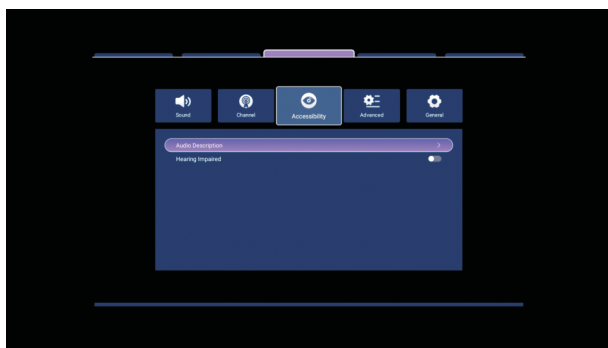

## Advanced

Press [▲/▼] button to select the option then Press [▶] button to enter the sub-menu.




# Main Menu

## Function Description:

<b>Blue Screen</b>	Off->On
<b>Source Setting</b>	Setting input source show or hide. Press [OK] button to rename input source.
<b>HDMI Setting</b>	HDMI CEC and ARC setting interface
<b>Teletext Language</b>	West Eur->East Eur->Russian->Farsian->Arabic->
<b>Audio Language</b>	Audio language setting interface(Available only in DTV source)
<b>Subtitle Language</b>	Subtitle language setting interface(Available only in DTV source)
<b>PVR File System</b>	Record program file system setting interface(Available only in ATV/DTV source)
<b>Locked</b>	System lock、channel lock、Parental controls setting interface

## General

Press [▲/▼] button to select the option then Press [▶] button to enter the sub-menu.

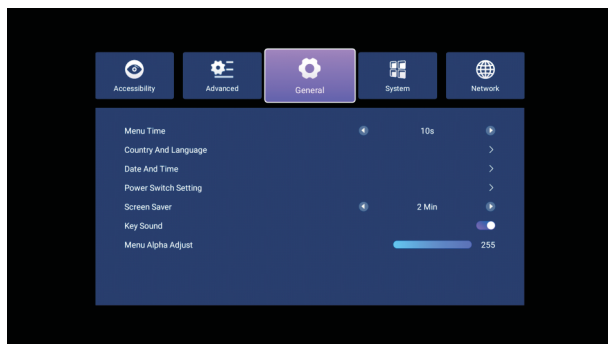


## Function Description:

<b>Menu Time</b>	Off->5s->10s->20s->30s->60s
<b>Country And Language</b>	the turning station country and OSD language setting interface
<b>Date And Time</b>	System Date And Time、TimeZone setting interface
<b>Power Switch Setting</b>	Power switch setting interface
<b>Screen Saver</b>	Off->2Min->5Min->10Min->20Min->30Min
<b>Key Sound</b>	Off->On
<b>Menu Alpha Adjust</b>	0->255

# Main Menu

## System

Press [▲/▼] button to select the option then Press [▶] button to enter the sub-menu.

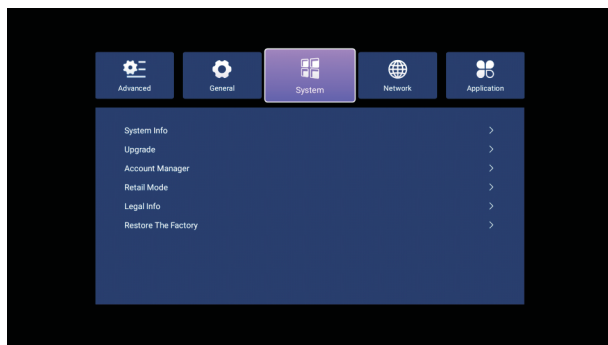


### Function Description:

<b>System Info</b>	View system info
<b>Upgrade</b>	Local upgrade and network upgrade setting interface
<b>Account Manager</b>	setting up your email address interface
<b>Retail Mode</b>	Off->On
<b>Legal Info</b>	legal information note interface
<b>Restore The Factory</b>	Restore system setting

## Network

Press [▲/▼] button to select the option then Press [▶] button to enter the sub-menu.

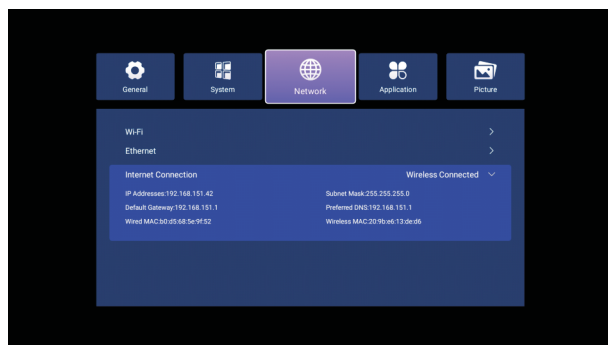


### Function Description:

<b>Wi-Fi</b>	Connect wifi, refresh and add wifi network setting interface
<b>Ethernet</b>	Ethernet network setting interface

# Main Menu

## Application

Press [▲/▼] button to select the option then Press [▶] button to enter the sub-menu.

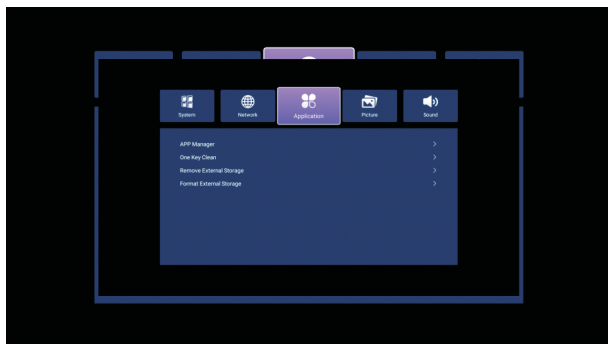

### Function Description:

**APP Manager** All APP manager interface


**One Key Clean** One key clean cache file

**Remove External** StorageRemove external storage device interface

**Format External** StorageFormat external storage


# FileManager

Click the usb icon in the upper right corner of the home page to enter the file manager page. As shown below:

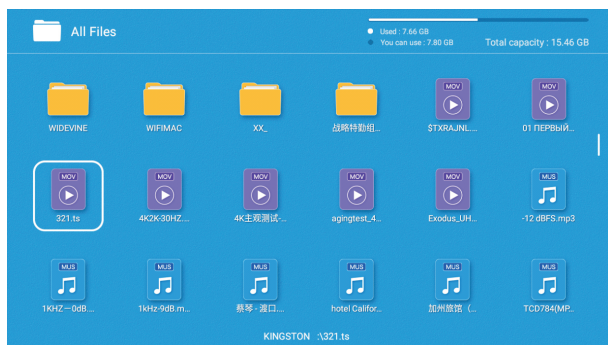


# FileManager

Click the corresponding drive letter to view the contents of the file in the USB, and select the file to view or play.  
As shown below:

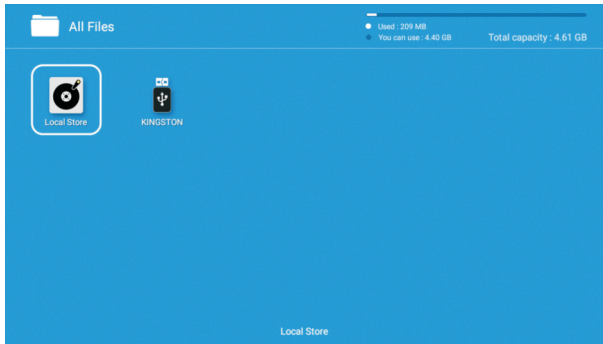

# Hotel

Press the remote control combination key Source + 1 1 4 7  
Hotel menu UI main interface

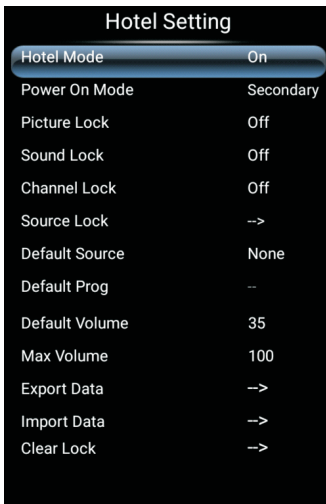

# Help

No power	<ul style="list-style-type: none"> <li>● Check if the AC cord of TV is plugged in or not. If there's still no power, please disconnect the plug, and reconnect to the socket after 60 seconds. Turn the power back on.</li> </ul>
Signal not received properly	<ul style="list-style-type: none"> <li>● Double or phantom images may appear on your TV if there are high buildings or mountains close to where you are. You can adjust the image thru manual operation: consult instruction of vernier regulation, or adjust the direction of the external antenna.</li> <li>● If you use an indoor antenna, signal reception may be more difficult under certain circumstances. Adjust the direction of the antenna for optimum reception. If this does not improve reception, you may have to switch to an external antenna.</li> </ul>
No picture	<ul style="list-style-type: none"> <li>● Check if the antenna at the back of the TV is connected properly.</li> <li>● View other channels to see if the problem still occurs.</li> </ul>
Video appears with no audio	<ul style="list-style-type: none"> <li>● Try increasing the volume.</li> <li>● Check if the TV's sound is on mute or not.</li> </ul>
Audio is present, but video does not appear or is discolored	<ul style="list-style-type: none"> <li>● Try adjusting the contrast and brightness.</li> </ul>
Static noise affects video and audio quality	<ul style="list-style-type: none"> <li>● Check if the antenna at the back of the TV is connected properly.</li> </ul>
Broken lines on screen	<ul style="list-style-type: none"> <li>● Electrical appliances such as hair dryers or vacuums etc. may be interfering with your TV set. Switch these appliances off.</li> </ul>
Remote doesn't work	<ul style="list-style-type: none"> <li>● Make sure the plastic bag which came with the remote control is removed. Try using the remote in a shorter distance from the TV. Check if the placement of the batteries is correct, or try using new batteries with the remote control.</li> <li>● The TV will go into Standby mode if it receives no response in a few minutes.</li> </ul>
No video (PC mode)	<ul style="list-style-type: none"> <li>● Please check if the cable is connected to the VGA port correctly, or if the cable is bent in some places.</li> </ul>
Vertical line blinking (PC Mode)	<ul style="list-style-type: none"> <li>● Enter the main menu, and adjust the vertical placement to eliminate the vertical line.</li> </ul>
Horizontal tearing (PC Mode)	<ul style="list-style-type: none"> <li>● Adjust the horizontal placement of the screen to clear any horizontal lines.</li> </ul>
Screen is too bright or dark (PC Mode)	<ul style="list-style-type: none"> <li>● Adjust the brightness or contrast in the main menu.</li> </ul>
No response from the PC	<ul style="list-style-type: none"> <li>● Check if the PC's display resolution is set to a compatible resolution for the TV.</li> </ul>
Lines appearing when a device is connected to the RCA port	<ul style="list-style-type: none"> <li>● Make sure you are using a cable in good quality.</li> </ul>
Problems are unresolved	<ul style="list-style-type: none"> <li>● Unplug the power cable and wait for 30 seconds, then reconnect to the socket. If problems still persist, do not attempt to repair the TV by yourself. Kindly contact the service center.</li> </ul>

Do not leave your TV displaying a static image, whether it is from a paused video, menu screen, etc. for an extended period of time, doing so will damage the display and may cause image burn-in.

# Specifications

Screen Size	power Consumption	Main accessories
24"	36W	User's manual x1 Remote controller x1 Power cord x1 AAA Batteries x2
32"	56W	
39"	60W	
40"	70W/90W	
43"	70W/80W/90W	
50"	100W	
55"	110W/135W	
58"	120W/135W	
65"	160W	
70"	180W	
75"	185W/250W	

★ LIFE TIME : 60,000 Hrs



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

## WARNING

**Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:**

1. Using cabinets or stands recommended by the manufacturer of the television set.
2. Only using furniture that can safely support the television set.
3. Ensuring the television set is not overhanging the edge of the supporting furniture.
4. Not placing the television set on tall furniture (for example, cupboards or bookcases). without anchoring both the furniture and the television set to a suitable support.
5. Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture,
6. Educating children about the dangers of climbing on furniture to reach the television set or its controls.

If your existing television set is being retained and relocated, the same considerations as above should be applied.







Wall-mounted screw: 22-24inch M4, 28-70inch M6, 75inch M8


Note: don't hang at an angle to avoid the risk of falling off.

This user manual for reference only



# Remote Controller

- 1.**POWER:** Turn on the TV or enter standby mode.
- 2.**MUTE:** Turn off the sound and turn on when press again.
- 3.**0-9:** Figures "0-9" are used to directly input channel number.
- 4.**LIST:** Press to open the channels list.
5.  Press this button to toggle between the current and the previous programme you were viewing
- 6.**S.MODE:** Select the different sound mode directly.
- 7.**SLEEP:** Set the sleep time.
8. **MTS:** Press to select the MTS mode.(for example,Nicam , BTSC,MONO,STEREO .eg )
- 9.**P.MODE:** Select the different picture mode directly.
- 10.**MENU:** Start system menu and return to upper menu.
- 11.**SOURCE:** Input source selection button.
12.   Press   button to select items.  
Press  button to adjust it.
- 13.**ENTER:** To confirm the choice with the highlighted menu item.
- 14.**EXIT:** Press to exit the OSD menu.
- 15.**DISPLAY:** Press to display the source and channel's display.

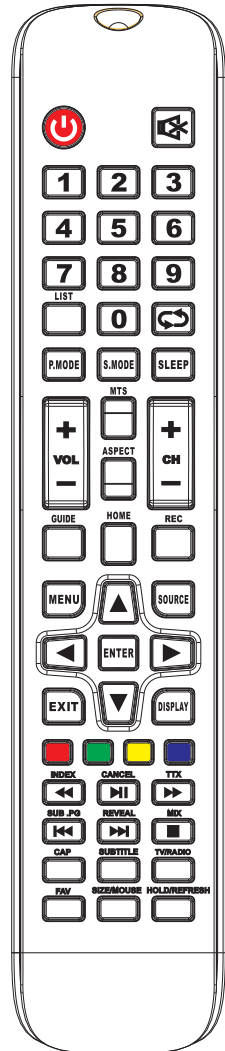

## Battery Installation:

Remove the battery compartment lid on the rear of the remote control by sliding the lid down, then off. Put two AAA batteries inside the battery compartment with their + and - ends aligned as indicated. Do not mix old and new batteries or different types of batteries. Refix the battery compartment lid. Slide the lid until you hear it click into place.

## Using the Remote Control:

Unless stated otherwise, the remote control can operate all the features of the TV.

Always point the remote control directly at the remote sensor in the front of the TV.

## CAUTION:

Batteries installed in the unit should not be exposed to excessive heat such as sunshine, fire and the like.


## CAUTION:

- Risk of explosion if the battery is replaced by an incorrect type
- disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
- leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;
- a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

# Remote Controller

## Descriptions of television remote control

16. **VOL+/VOL-**: Press to increase / decrease the sound level.
17. **TV/RADIO** : When watching channel, allows you to switch between TV and Radio modes
18. **GUIDE**: Launches the EPG (Electronic Program Guide)
19. **CAP:A key to the current image is saved to the disk.**
20. **CANCEL**: 1. When a page is selected in the mode of text, it may take some time before it becomes available, pressing the CANCEL key will return to the TV mode. When the required page is found , the page number will appear at the top of the TV picture, press the CANCELkey to return to the mode of text for you to browse this page.  
2. Press to PLAY/PAUSE in the USB mode. start play and PAUSE ,in USB mode.
21. **INDEX**:1. Request the Index page in Teletext mode.  
2. Press to fast reverse in USB mode.
22. **SIZE**: 1. Change the size of display in Teletext mode.  
2. Mouse switch.
23. **REVEAL**: 1. Reveal or Hide the hidden words.  
2. Next chapter in PVR or Media Player mode.
24. **GREEN/RED/YELLOW/CYAN button**
25. **CH+/CH-** : Press to scan through channels.
26. **FAV** : press to open the favorite list.  
then you can select the favorite channel.
27. **ASPECT**: Select picture scale.
28. **HOME**: A key back to the android home page.
29. **SUB. PG** 1. Press to access sub page.  
2. Previous chapter in PVR or Media Player mode
30. **SUBTITLE**:To show and set the language of current DTV.
31. **HOLD**:1.HOLD On or Off for current page display .  
2.Refresh page.
32. **TTX**:1.Switch the teletext on and off.  
2.fast forward in PVR or Media Player mode.
33. **MIX**: 1. TV and TXT pictures are mixed together(transparent background)  
2. Exit the playing function in PVR or Media Player mode.
34. **REC**: Record begin in PVR mode.

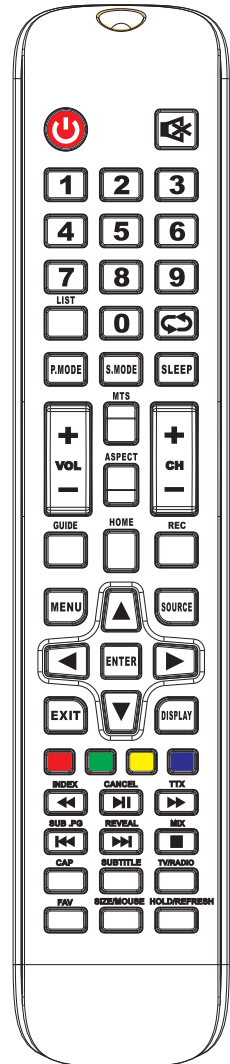

# iq

## LED TV

### Οδηγίες Χρήσης

LED-5002SMT

#### **Σημαντικό**

Παρακαλούμε διαβάστε προσεκτικά αυτές τις οδηγίες πριν εγκαταστήσετε και χρησιμοποιήσετε την τηλεόραση. Φυλάξτε τες για πιθανή μελλοντική αναφορά.

# Προετοιμασία

## Πληροφορίες Ασφάλειας

### ΠΡΟΣΟΧΗ


ΚΙΝΔΥΝΟΣ ΗΛΕΚΤΡΟΠΛΗΞΙΑΣ  
ΜΗΝ ΑΝΟΙΞΕΤΕ

Αυτή η συσκευή λειτουργεί με υψηλή τάση. Για να αποφύγετε ηλεκτροπληξία, να μην αφαιρέσετε το περίβλημά της. Για επισκευές θα πρέπει ν' απευθύνεστε μόνο στον αντιπρόσωπο.

Δεν θα πρέπει να επιχειρήσετε να επισκευάσετε μόνοι σας τη συσκευή γιατί υπάρχει κίνδυνος ηλεκτροπληξίας. Για οποιοδήποτε πρόβλημα επικοινωνήστε με τον αντιπρόσωπο.



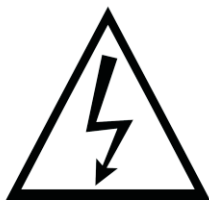


Το σήμα με το θαυμαστικό εγγεγραμμένο σε ισοσκελές τρίγωνο προειδοποιεί το χρήστη για την παρουσία σημαντικών οδηγιών χρήσης και συντήρησης στα έγγραφα που συνοδεύουν τη συσκευή.



**Προειδοποίηση:**  
Το σήμα με τον κεραυνό εγγεγραμμένο σε ισοσκελές τρίγωνο, προειδοποιεί το χρήστη για την παρουσία επικίνδυνης, μη μονωμένης τάσης εντός της συσκευής, η οποία έχει αρκετή ένταση ώστε να προκαλέσει ηλεκτροπληξία.

## Σημαντικές Προειδοποιήσεις Ασφάλειας

1. Διαβάστε αυτές τις οδηγίες πριν τη χρήση της συσκευής.
2. Φυλάξτε αυτές τις οδηγίες.
3. Δώστε προσοχή σε όλες τις προειδοποιήσεις.
4. Ακολουθήστε όλες τις οδηγίες.
5. Μη χρησιμοποιείτε τη συσκευή κοντά σε νερό.
6. Καθαρίστε μόνο με στεγνό πανί.
7. Μη φράσετε τις οπές εξαερισμού. Εγκαταστήστε τη συσκευή σύμφωνα με τις οδηγίες του κατασκευαστή.
8. Μην την εγκαταστήσετε κοντά σε πηγές θερμότητας όπως π.χ. καλοριφέρ, αερόθερμα, σόμπες, φούρνους ή άλλες συσκευές (συμπεριλαμβανομένων των ενισχυτών), που μπορεί να παράγουν θερμότητα.
9. Μην παραβλέπετε τον παράγοντα ασφάλειας που παρέχει το βύσμα πολικότητας ή γείωσης. Το βύσμα πολικότητας έχει δύο λεπίδες εκ των οποίων η μία είναι πιο πλατιά. Το βύσμα γείωσης έχει δύο λεπίδες και μία τρίτη προεξοχή, που αποτελεί τη γείωση. Η πλατιά λεπίδα ή η τρίτη προεξοχή παρέχονται για την ασφάλειά σας. Αν το παρεχόμενο βύσμα δεν ταιριάζει στην πρίζα, απευθυνθείτε σε έναν ηλεκτρολόγο για την αντικατάσταση της πρίζας.
10. Μην τσακίζετε, μην τρυπάτε και μην πατάτε το καλώδιο – ειδικά κοντά στα βύσματα και στα σημεία όπου το καλώδιο βγαίνει από τη συσκευή.
11. Χρησιμοποιήστε μόνο αξεσουάρ εγκεκριμένα από τον κατασκευαστή.
12. Χρησιμοποιήστε μόνο καρότσι, τρίποδο, βραχίονα στήριξης ή τραπέζι που να είναι σύμφωνα με τις προδιαγραφές του κατασκευαστή ή να πωλούνται μαζί με τη συσκευή. Όταν χρησιμοποιείτε καρότσι για τη μεταφορά και έχετε τη συσκευή φορτωμένη πάνω του, να είστε ιδιαίτερα προσεκτικοί ώστε να αποφύγετε τραυματισμό από τυχόν ανατροπή του φορτίου. 
13. Αποσυνδέστε αυτή τη συσκευή κατά τη διάρκεια καταιγίδων ή όταν δεν την χρησιμοποιείτε για μεγάλο χρονικό διάστημα.
14. Προσοχή: Για να μειώσετε τον κίνδυνο ηλεκτροπληξίας, να μην εκθέσετε τη συσκευή σε βροχή ή υγρασία.
15. Ο τρόπος πλήρους διακοπής της τροφοδοσίας είναι η αποσύνδεση του φως του καλωδίου ρεύματος από την πρίζα ρεύματος στην οποία είναι συνδεδεμένο.
16. Η πρίζα ρεύματος στην οποία θα συνδέσετε τη συσκευή θα πρέπει να βρίσκεται κοντά της και να είναι εύκολα προσβάσιμη.
17. Δεν θα πρέπει να τοποθετήσετε τη συσκευή σε βιβλιοθήκη ή ράφι, εκτός κι αν υπάρχει επαρκής εξαερισμός ή το υποδεικνύουν οι οδηγίες χρήσης.
18. Δεν θα πρέπει να εκθέσετε τη συσκευή σε πιτσιλιές και νερό και μην τοποθετήσετε πάνω της αντικείμενα γεμάτα με νερό όπως π.χ. βάζα.
19. Να μην τοποθετήσετε εστίες κινδύνου πάνω στη συσκευή (π.χ. δοχεία γεμάτα με υγρά ή αναμμένα κεριά).
20. Στήριξη σε τοίχο ή οροφή – Θα πρέπει να ακολουθήσετε τις οδηγίες του κατασκευαστή.
21. Ποτέ να μην τοποθετήσετε την τηλεόραση, το τηλεχειριστήριο ή τις μπαταρίες κοντά σε γυμνές εστίες φωτιάς ή σε πηγές θερμότητας, συμπεριλαμβανομένης της άμεσης έκθεσης στον ήλιο. Για ν' αποφύγετε πυρκαγιά θα πρέπει να κρατάτε τα κεριά ή άλλες εστίες φωτιάς μακριά από την τηλεόραση, το τηλεχειριστήριο και τις μπαταρίες. 
22. Υπό κανονικές συνθήκες λειτουργίας η θύρα USB θα πρέπει να έχει φορτίο 0.5A. Για επισκευές απευθυνθείτε μόνο σε εξουσιοδοτημένο προσωπικό. Μην επισκευάσετε τη συσκευή μόνοι σας.
23. Δεν θα πρέπει να εκθέσετε τη συσκευή σε υπερβολική ζέστη όπως ηλιοφάνεια, φωτιά κ.ά.τ.
24.  Αυτή η συσκευή είναι Κλάσης II ή αλλιώς, διπλά μονωμένη ηλεκτρική συσκευή. Έχει σχεδιαστεί ώστε να μην απαιτεί ασφαλή σύνδεση σε γείωση.
25. Η μέγιστη θερμοκρασία περιβάλλοντος για χρήση της συσκευής δεν θα πρέπει να ξεπερνά τους 45 βαθμούς. Το μέγιστο υψόμετρο χρήσης είναι 2000 μέτρα.

# Πλήκτρα και Υποδοχές

## Πλήκτρα της Τηλεόρασης

**Σημείωση:** Ακολουθούν οδηγίες σχετικά με τα πλήκτρα της τηλεόρασης.



**Προβολή/ Απόκρυψη των εικονιδίων των πλήκτρων:** Ενώ δεν εμφανίζεται κάποιο εικονίδιο πλήκτρου στην οθόνη, πιάστε το επιθυμητό πλήκτρο και θα εμφανιστεί το αντίστοιχο εικονίδιο, όπως φαίνεται στην παραπάνω εικόνα. Αν δεν κάνετε κάποια ενέργεια, το εικονίδιο πλήκτρου θα εξαφανιστεί αυτόματα μετά από 5 δευτερόλεπτα.

**Επιλογή εικονιδίου:** Πιέστε σύντομα το πλήκτρο, μετακινήστε το πλαίσιο επιλογής στα δεξιά και επιλέξτε το επιθυμητό εικονίδιο.

**Επιλογή λειτουργίας εικονιδίου:** Κρατήστε πατημένο το επιθυμητό πλήκτρο για να ενεργοποιήσετε τη λειτουργία του επιλεγμένου εικονιδίου.


### Περιγραφή εικονιδίων:

- Εικονίδιο Απενεργοποίησης:** Αντιστοιχεί στο πλήκτρο POWER (ενεργοποίησης/ απενεργοποίησης) του τηλεχειριστηρίου.
- Εικονίδιο Μενού:** Αντιστοιχεί στο πλήκτρο MENU (Μενού) του τηλεχειριστηρίου.
- Εικονίδιο Πηγής:** Αντιστοιχεί στο πλήκτρο SOURCE (Πηγή) του τηλεχειριστηρίου.


- Εικονίδιο CH+:** Αντιστοιχεί στο πλήκτρο CH+ (Επόμενο κανάλι) του τηλεχειριστηρίου.
- Εικονίδιο CH-:** Αντιστοιχεί στο πλήκτρο CH- (Προηγούμενο κανάλι) του τηλεχειριστηρίου.
- Εικονίδιο Volume+:** Αντιστοιχεί στο πλήκτρο VOL+ (Αύξηση έντασης) του τηλεχειριστηρίου.
- Εικονίδιο Volume-:** Αντιστοιχεί στο πλήκτρο VOL- (Μείωση έντασης) του τηλεχειριστηρίου.

	<b>Είσοδος AV (Εικόνας/ Ήχου)</b> Είσοδος εξωτερικού σήματος εικόνας και δύο εισοδοί ήχου (δεξιά/αριστερό κανάλι).		<b>Είσοδος USB</b> Συνδέστε συσκευή USB για αναπαραγωγή αρχείων πολυμέσων ή για εγγραφή τηλεοπτικών εκπομπών μέσω της λειτουργίας PVR.
	<b>Υποδοχή CI</b> Για σύνδεση κάρτας CI (Common Interface). Χρησιμοποιείται για συνδρομητική τηλεόραση.		<b>Υποδοχή OPTICAL</b> Για σύνδεση με δέκτη SPDIF.
	<b>Είσοδος HDMI</b> Για σύνδεση συσκευών που διαθέτουν έξοδο HDMI.		<b>RJ45</b> Συνδέεται στο ίντερνετ.
	<b>ANT 75</b> Για σύνδεση κεραίας/ καλωδιακής (75/VHF/ UHF).		

## External device connection diagram

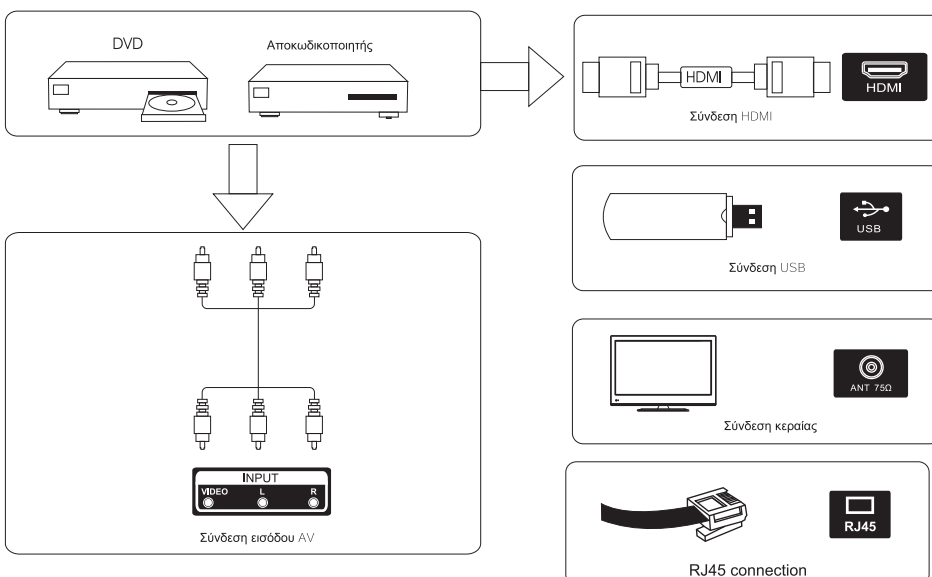

## Εγκατάσταση και Σύνδεση της Τηλεόρασης

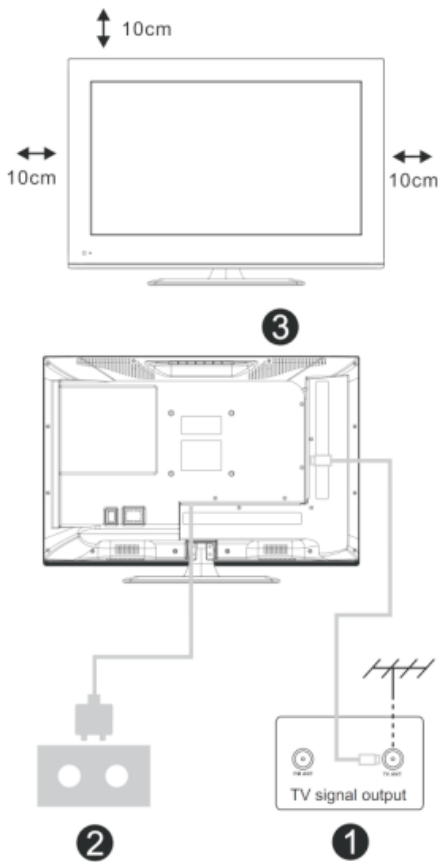

### Εγκατάσταση της τηλεόρασης

Τοποθετήστε την τηλεόραση σε μία επίπεδη επιφάνεια που να αντέχει το βάρος της.

Για αποφυγή κινδύνων παρακαλούμε να μην εκθέσετε την τηλεόραση σε νερό ή σε πολύ ζεστά μέρη (όπως κοντά σε αναμμένα κεριά ή θερμαντικά σώματα). Επίσης, να μην φράσετε τις οπές εξαερισμού στο πίσω μέρος της τηλεόρασης.

### Σύνδεση της κεραίας και του καλωδίου ρεύματος

1. Συνδέστε το καλώδιο κεραίας στην υποδοχή κεραίας στο πίσω μέρος της τηλεόρασης.
2. Συνδέστε το καλώδιο ρεύματος της τηλεόρασης σε πρίζα (εναλλασσόμενο ρεύμα 100-240V~50/60Hz).

### Ενεργοποίηση της τηλεόρασης

3. Σ υ ν δ έ σ τ ε το τροφοδοτικό, εισέλθετε σε κατάσταση αναμονής (κόκκινο φως), πατήστε το κουμπί λειτουργίας της τηλεόρασης ή το κουμπί λειτουργίας στο τηλεχειριστήριο για να ενεργοποιήσετε την τηλεόραση

### Σημείωση:


Οι εικόνες είναι ενδεικτικές.

## Εγκατάσταση της Επιτραπέζιας Βάσης της Τηλεόρασης


1. Ανοίξτε το χαρτοκιβώτιο και βγάλτε την τηλεόραση, τα διάφορα εξαρτήματα και τη βάση (ορισμένα μοντέλα δεν διαθέτουν βάση).
2. Για να αποφύγετε ζημιά στην τηλεόραση, καλύψτε το τραπέζι με ένα μαλακό υπόστρωμα, τοποθετήστε την στραμμένη προς τα κάτω στο υπόστρωμα. Η βάση βιδώνεται στην τηλεόραση με βίδες.
3. Βιδώστε τη βάση και συνδέστε την στην τηλεόραση.
4. Η εγκατάσταση έχει ολοκληρωθεί.

### Σημείωση:


Η εικόνα είναι μόνο για αναφορά. Ισχύουν οι πραγματικές συνθήκες.

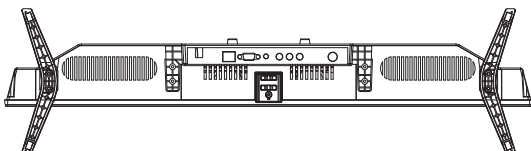


Για ευκολότερη εγκατάσταση της βάσης και προς αποφυγή γρατσουνιών και ζημιών, προτείνεται η χρήση κατσαβιδιού τύπου PH2.

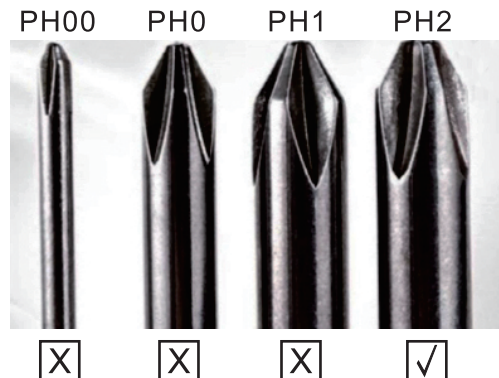

## Οδηγός εκκίνησης

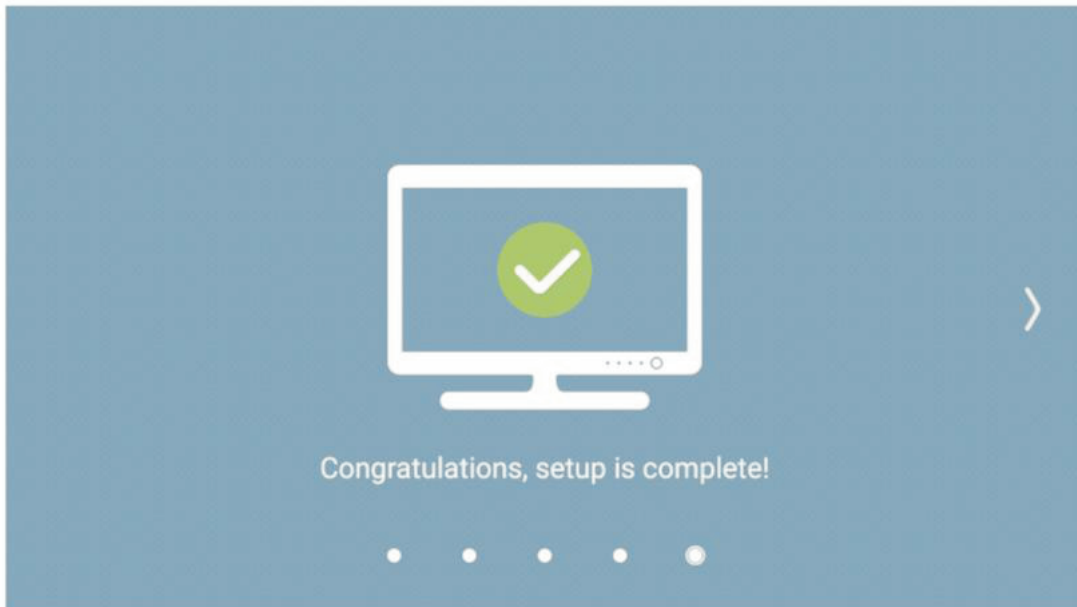


Μετά την ολοκλήρωση της ρύθμισης του Boot Wizard , μπορείτε να εισέλθετε στην αρχική διεπαφή SmartTV.

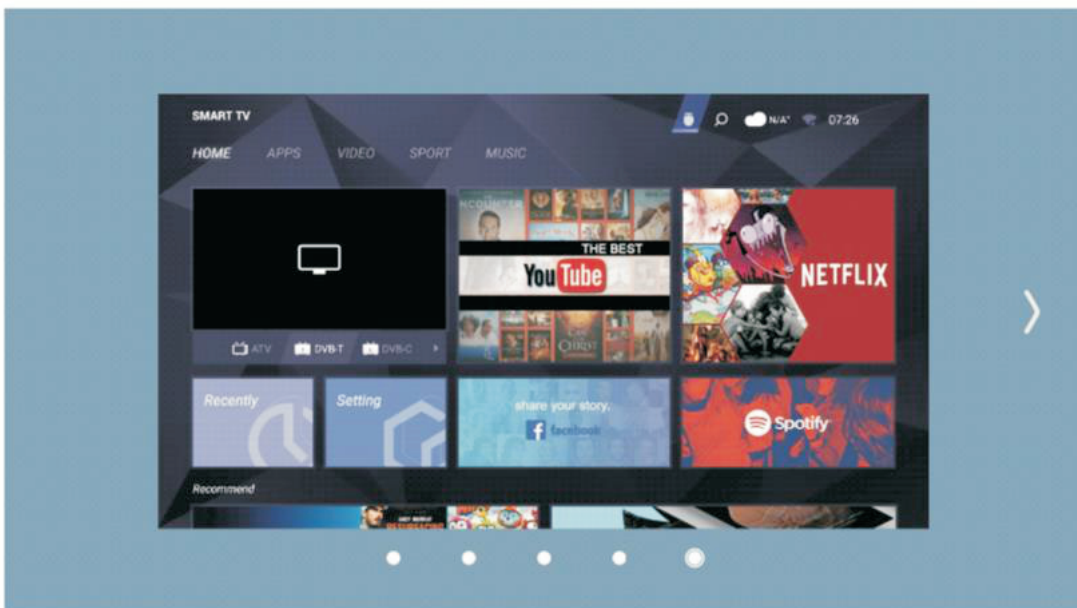

## Είσοδοι – Πηγές


Πατήστε το κουμπί [SOURCE] για να ανοίξετε τη λίστα πηγών εισόδου, στη συνέχεια πατήστε το κουμπί [▲/▼] για να επισημάνετε μια είσοδο και πατήστε το κουμπί [OK] για εναλλαγή.



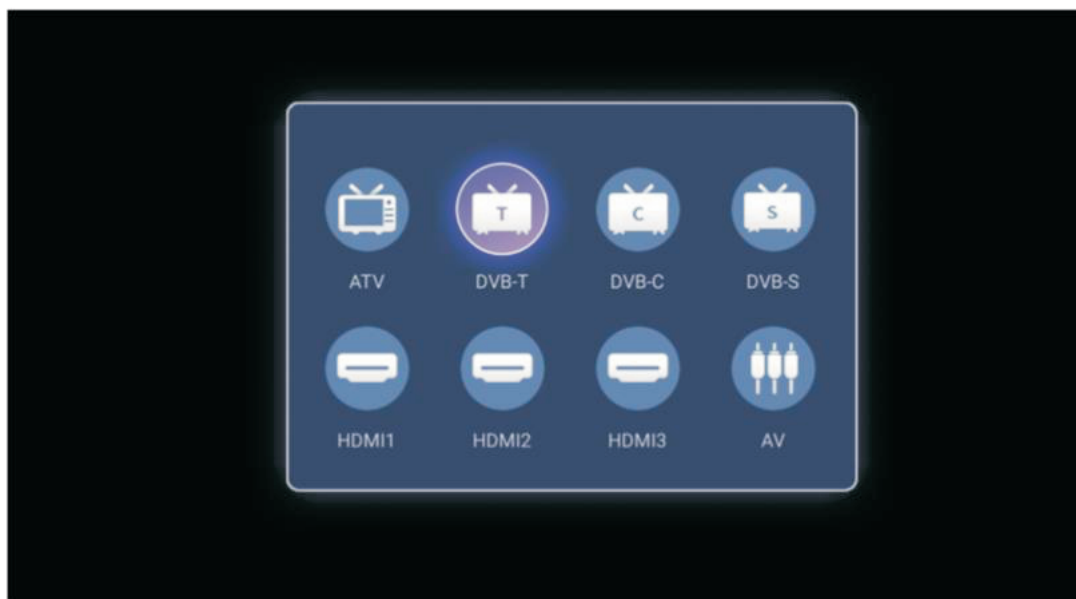


### Κεντρικό Μενού

Πατήστε το κουμπί [MENU] για να ανοίξετε τη διεπαφή του κύριου μενού. Πατήστε το κουμπί [◀/▶] για να επιλέξετε την επιλογή και, στη συνέχεια, πατήστε το κουμπί [▼] για να εισέλθετε στο υπομενού. Στη συνέχεια, πατήστε [MENU] ή [EXIT] για να επιστρέψετε στην κύρια μενού.

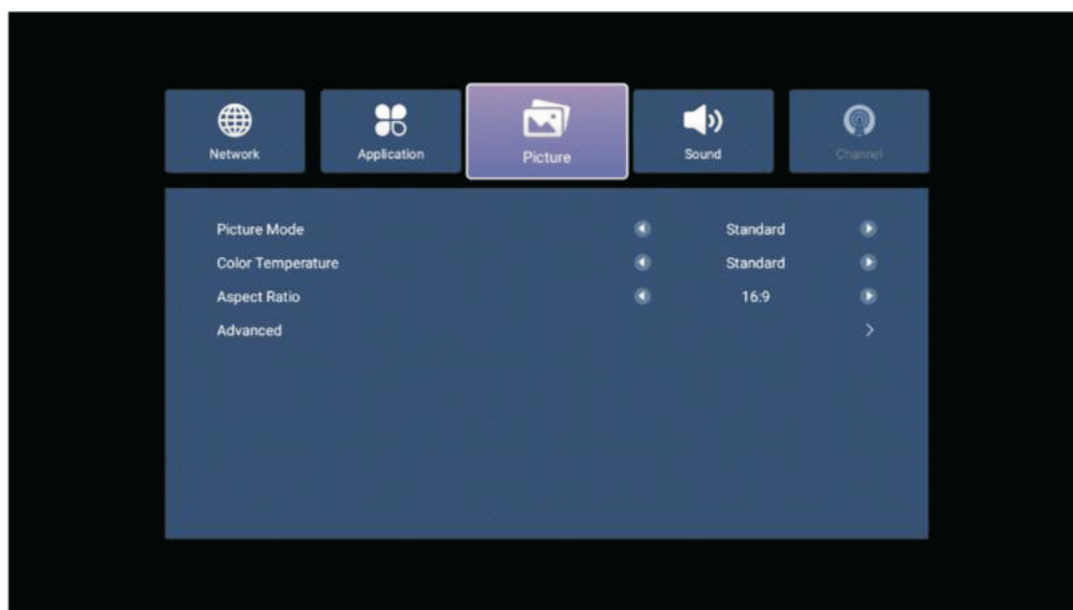

### Εικόνα

Πατήστε το κουμπί [▲/▼] για να επιλέξετε την επιλογή και, στη συνέχεια, πατήστε ◀ για να μειώσετε την παράμετρο. Πατήστε ▶ για να αυξήσετε την παράμετρο.

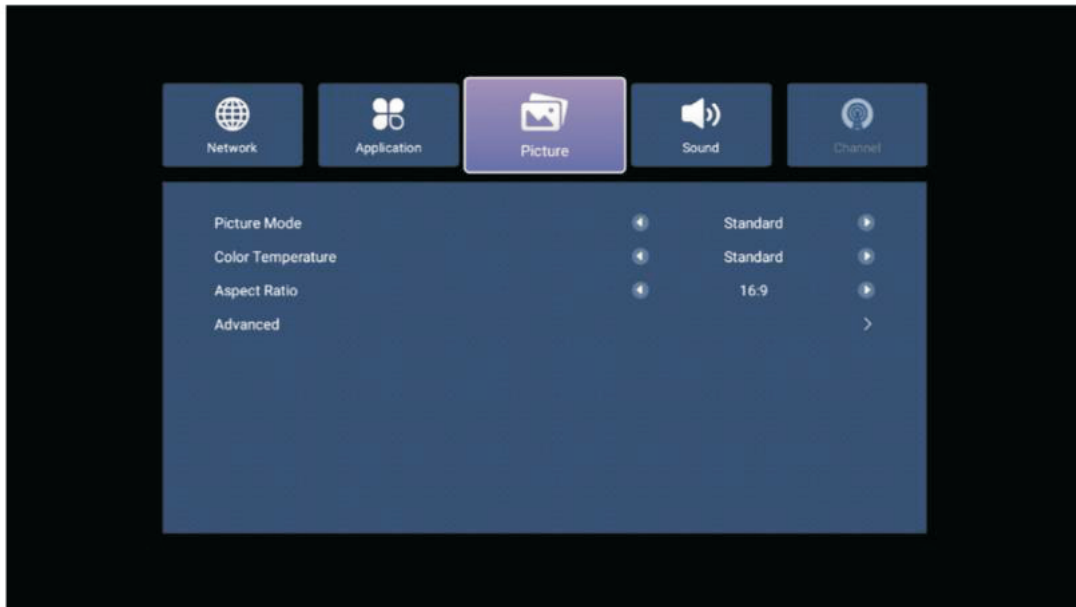


### Περιγραφή Λειτουργίας:

Λειτουργία εικόνας Λόγος διαστάσεων θερμοκρασίας χρώματος  
 Τυπικό->Δυναμικό->Ταινία->Εξοικονόμηση ενέργειας->Τυπικό χρήστη -> Ζεστό ->  
 Ψυχρό 16:9->4:3->Ζουμ1->Ζουμ2->Πλήρης->Αυτόματο  
 Για προχωρημένους (επιλέξτε την επιλογή Για προχωρημένους και, στη συνέχεια, πατήστε  
 το κουμπί [OK/▶] για να εισέλθετε στο υπομενού). NR->DLC->HDR-  
 >Λειτουργία HDMI (Διατίθεται μόνο σε πηγή HDMI.)

### Ήχος

Πατήστε το κουμπί [▲/▼] για να επιλέξετε την επιλογή και, στη συνέχεια, πατήστε  
 ◀ για να μειώσετε την παράμετρο. Πατήστε ▶ για να αυξήσετε την παράμετρο.

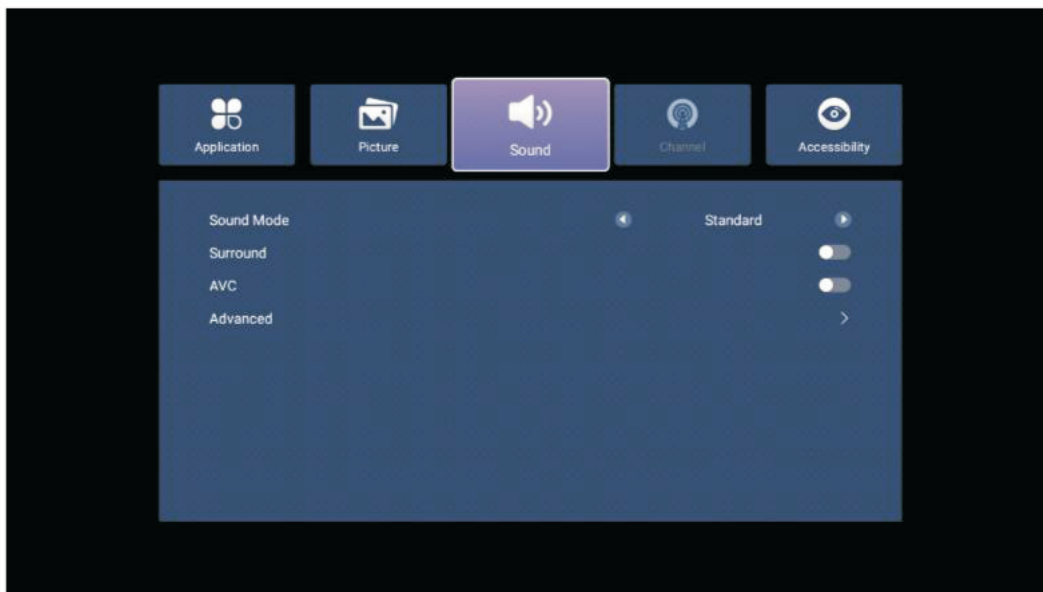

### Περιγραφή Λειτουργίας:

Κυρίως μενού

Λειτουργία ήχου Standard->Sport->Movie->Music->User


Surround OFF->ON

AVC OFF->ON

Για προχωρημένους (επιλέξτε την επιλογή ADVANCED και, στη συνέχεια, πατήστε το κουμπί [OK/▶] για να εισέλθετε στο υπομενού). Υπόλοιπο->Ψηφιακή έξοδος

### ΚΑΝΑΛΙ

Πατήστε το κουμπί [▲/▼] για να επιλέξετε την επιλογή και, στη συνέχεια, πατήστε το κουμπί [▶] για να εισέλθετε στο υπομενού.

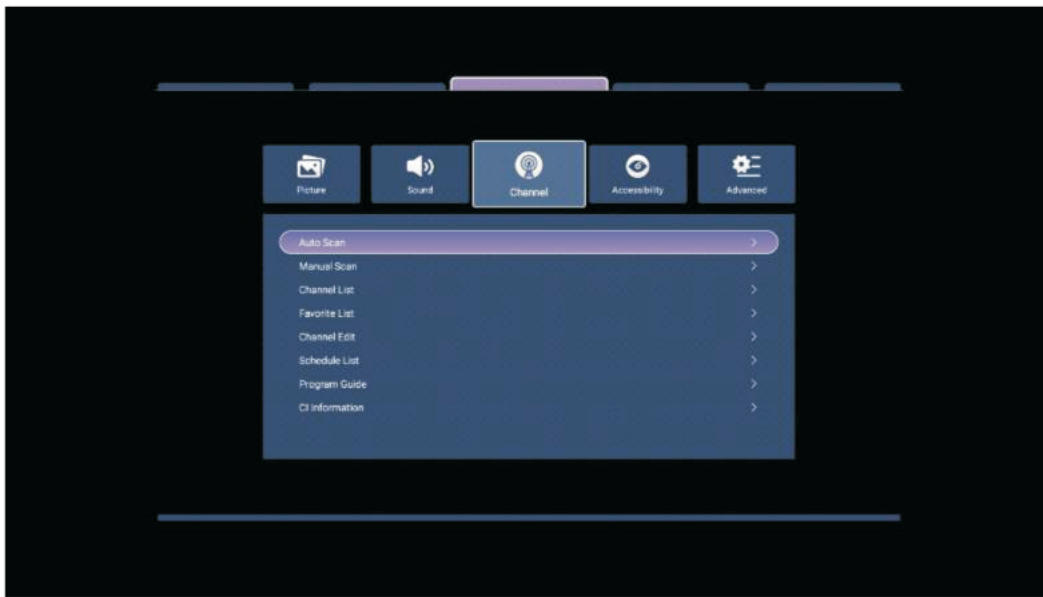

### Αυτόματη σάρωση

Μη αυτόματη Σάρωση

Λίστα καναλιών

Λίστα αγαπημένων καναλιών

Επεξεργασία καναλιών


Επεξεργασία χρονοδιαγράμματος

Οδηγός προγράμματος

CI Πληροφορίες


### Προσβασιμότητα

Πατήστε το κουμπί [▲/▼] για να επιλέξετε την επιλογή και, στη συνέχεια, πατήστε ◀ για να μειώσετε την παράμετρο. Πατήστε ▶ για να αυξήσετε την παράμετρο.

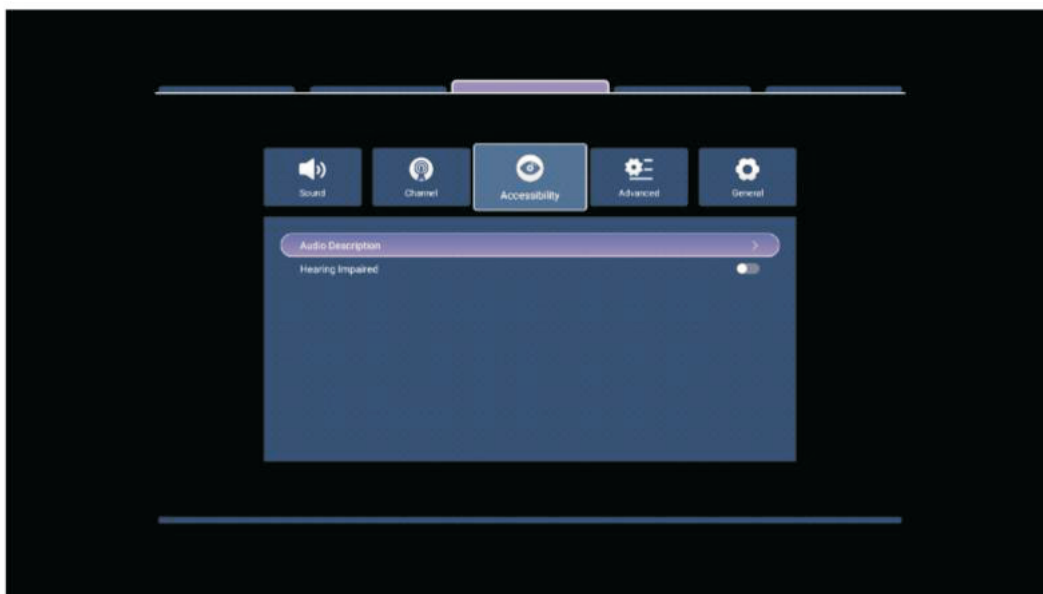

### Για Προχωρημένους

Πατήστε το κουμπί [▲/▼] για να επιλέξετε την επιλογή και, στη συνέχεια, πατήστε το κουμπί [▶] για να εισέλθετε στο υπομενού.

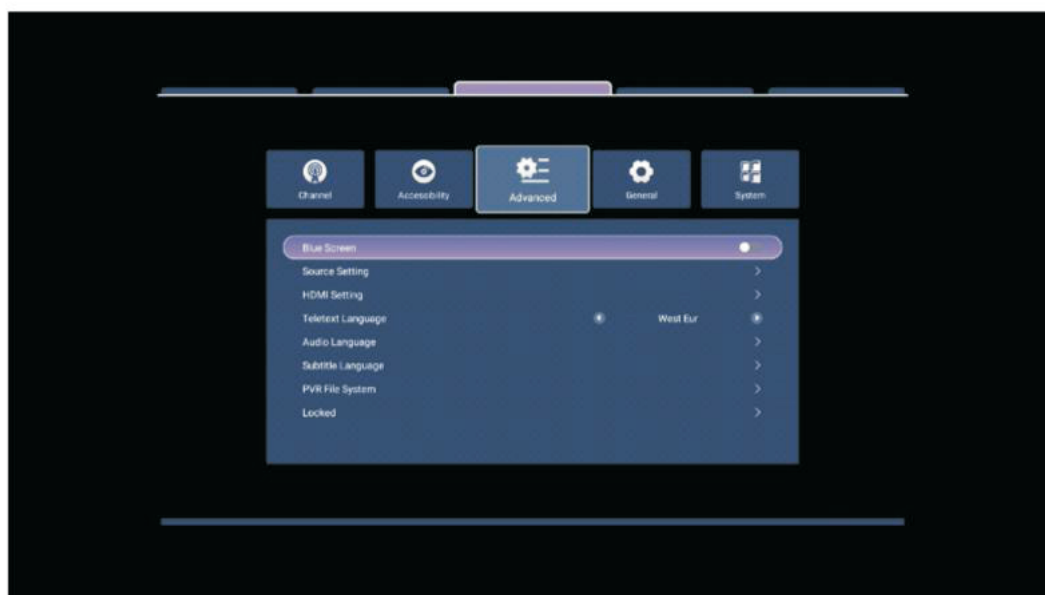


### Περιγραφή Λειτουργίας:

Μπλε οθόνη	Off-> On
Ρύθμιση πηγής	Ρύθμιση της πηγής εισόδου για εμφάνιση ή απόκρυψη. Πατήστε το κουμπί [OK] για να μετονομάσετε την πηγή εισόδου.
Ρύθμιση HDMI	Διασύνδεση ρύθμισης HDMI CEC και ARC
Γλώσσα Teletext	West Eur->Eest Eur->Ρωσικά->Farsian->Arabic->
Γλώσσα ήχου	Διεπαφή ρύθμισης γλώσσας ήχου (Διατίθεται μόνο σε πηγή DTV)

Γλώσσα υποτίτλων	Διεπαφή ρύθμισης γλώσσας υπότιτλων (Διατίθεται μόνο στην πηγή DTV)
Σύστημα αρχείων PVR	Διεπαφή ρύθμισης συστήματος αρχείων προγράμματος εγγραφής (Διατίθεται μόνο σε πηγή ATV/DTV)
Κλείδωμα	Κλείδωμα συστήματος, κλείδωμα καναλιού, διεπαφή ρύθμισης γενικού ελέγχου

## Γενικά

Πατήστε το κουμπί [▲/▼] για να επιλέξετε την επιλογή και, στη συνέχεια, πατήστε το κουμπί [▶] για να εισέλθετε στο υπομενού.

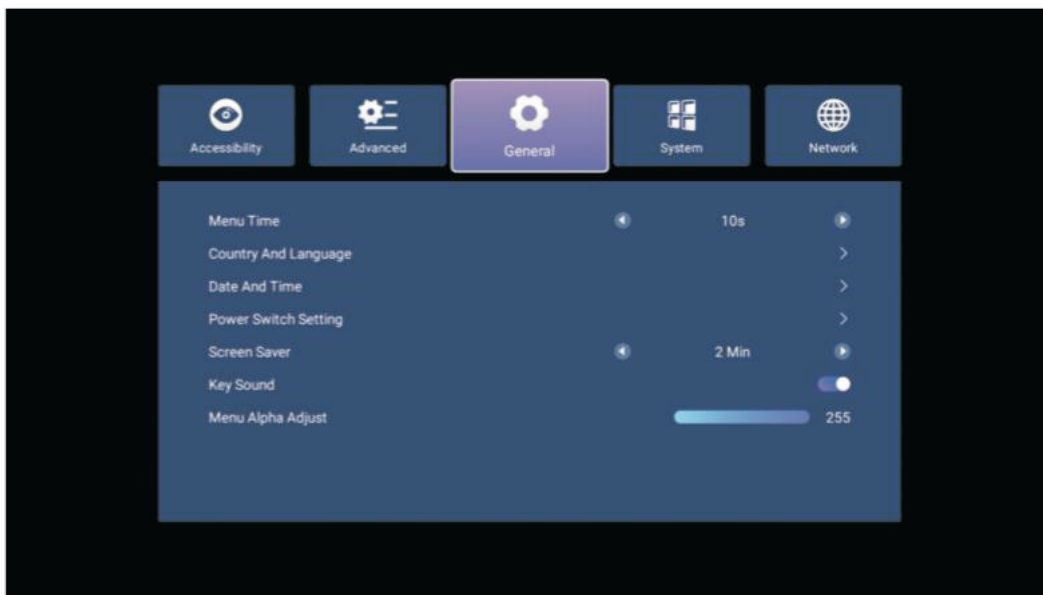

### Περιγραφή λειτουργίας:

Χρόνος μενού Off->5s->10s->20s->30s->60s

Χώρα και γλώσσα διεπαφή ρύθμισης της χώρας του σταθμού στροφής και της γλώσσας OSD

Ημερομηνία και ώρα Ημερομηνία και ώρα συστήματος. Διεπαφή ρύθμισης ζώνης ώρας


Διακόπτης τροφοδοσίας Διεπαφή ρύθμισης διακόπτη τροφοδοσίας  
 Ρύθμιση προφύλαξης οθόνης Απενεργοποίηση->2 λεπτά->5 λεπτά->10 λεπτά->20 λεπτά->30 λεπτά

Ήχος πλήκτρων Off->On

Μενού Alpha Adjust 0->255

### Σύστημα

Πατήστε το κουμπί [▲/▼] για να επιλέξετε την επιλογή και, στη συνέχεια, πατήστε το κουμπί [▶] για να εισέλθετε στο υπομενού.

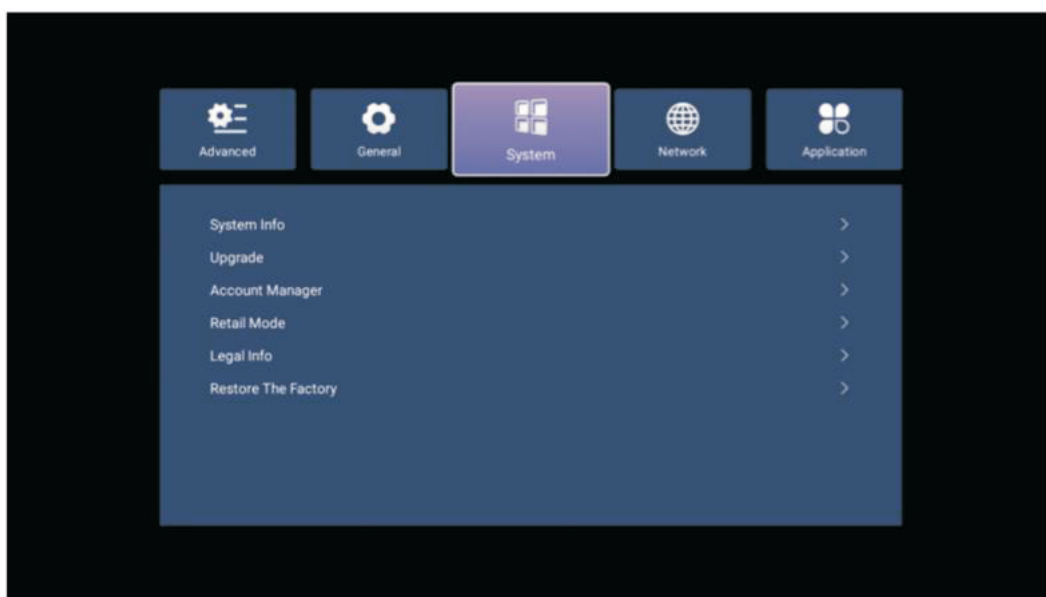


### Περιγραφή λειτουργίας:

Πληροφορίες συστήματος	Προβολή πληροφοριών συστήματος
Αναβάθμιση	Διεπαφή ρύθμισης τοπικής αναβάθμισης και αναβάθμισης δικτύου
Λειτουργία διαχείρισης λογαριασμού	ρυθμίζει τη διεπαφή της διεύθυνσης email σας
Λειτουργία Λιανικής	Off-> On
Νομικές Πληροφορίες	διεπαφή σημειώσεων νομικών πληροφοριών
Επαναφορά εργοστασιακών Ρυθμίσεων	Επαναφορά της ρύθμισης συστήματος

### Δίκτυο

Πατήστε το κουμπί [▲/▼] για να επιλέξετε την επιλογή και, στη συνέχεια, πατήστε το κουμπί [▶] για να εισέλθετε στο υπομενού.

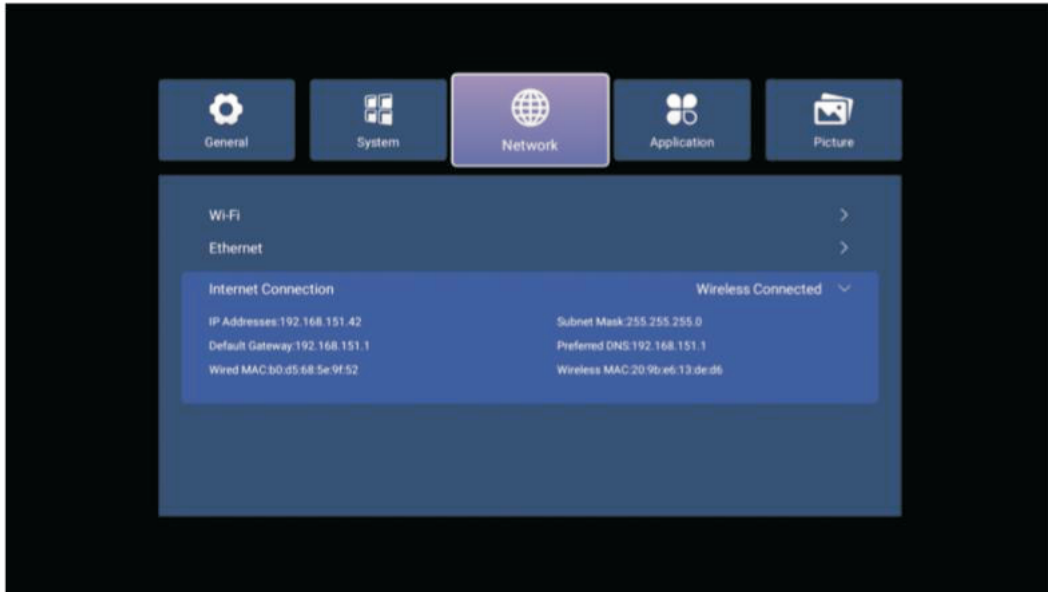

### Περιγραφή Λειτουργίας:


Wi-Fi                    Σύνδεση wifi, ανανέωση και προσθήκη διεπαφής ρύθμισης δικτύου wifi  
 Ethernet                Διεπαφή ρύθμισης δικτύου Ethernet

=====

### Εφαρμογές


Πατήστε το κουμπί [▲/▼] για να επιλέξετε την επιλογή και, στη συνέχεια, πατήστε το κουμπί [▶] για να εισέλθετε στο υπομενού.

APP Manager            Όλη η διεπαφή διαχειριστή APP (εφαρμογών)  
 Καθαρισμός ενός κλειδιού    Ένα κλειδί καθαρό αρχείο προσωρινής μνήμης  
 Κατάργηση εξωτερικής        διεπαφή συσκευής εξωτερικής αποθήκευσης  
 Format                                εξωτερικής αποθήκευσης

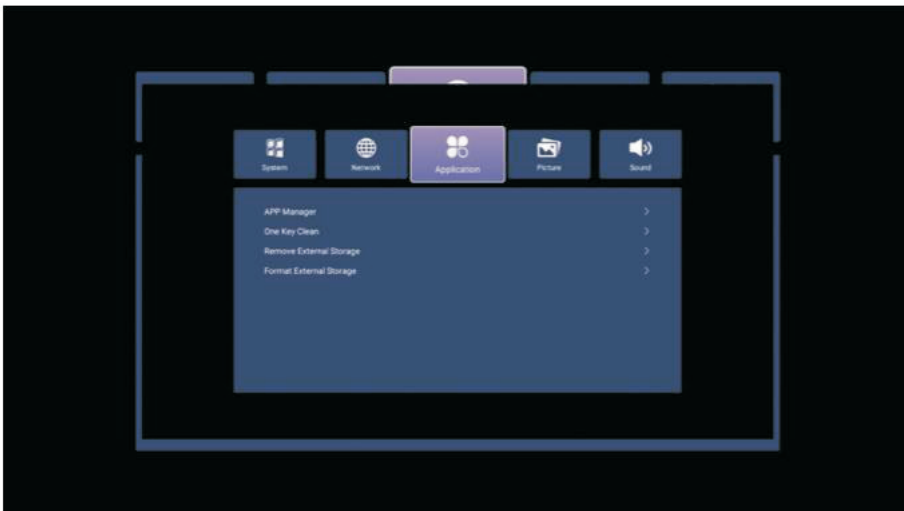

## Διαχείριση αρχείων

Κάντε κλικ στο αντίστοιχο γράμμα της μονάδας δίσκου για να προβάλετε τα περιεχόμενα του αρχείου στο USB και επιλέξτε το αρχείο για προβολή ή αναπαραγωγή. Οπως φαίνεται παρακάτω:

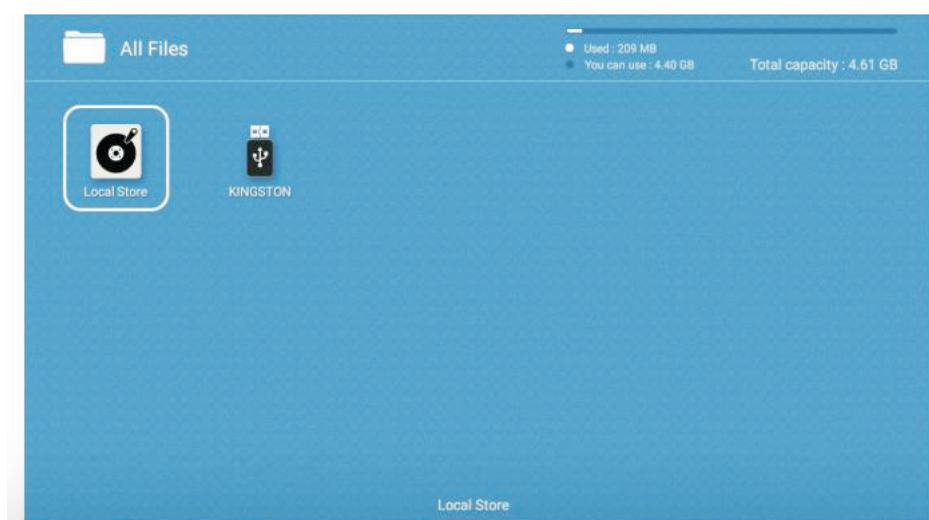


## HOTEL MODE (Μενού Ξενοδοχείου)

Πατήστε το πλήκτρο συνδυασμού τηλεχειριστηρίου Πηγή + 1 1 4 7 Κύρια διεπαφή περιβάλλοντος χρήστη μενού ξενοδοχείου



## Hotel Setting

Hotel Mode	On
Power On Mode	Secondary
Picture Lock	Off
Sound Lock	Off
Channel Lock	Off
Source Lock	-->
Default Source	None
Default Prog	--
Default Volume	35
Max Volume	100
Export Data	-->
Import Data	-->
Clear Lock	-->

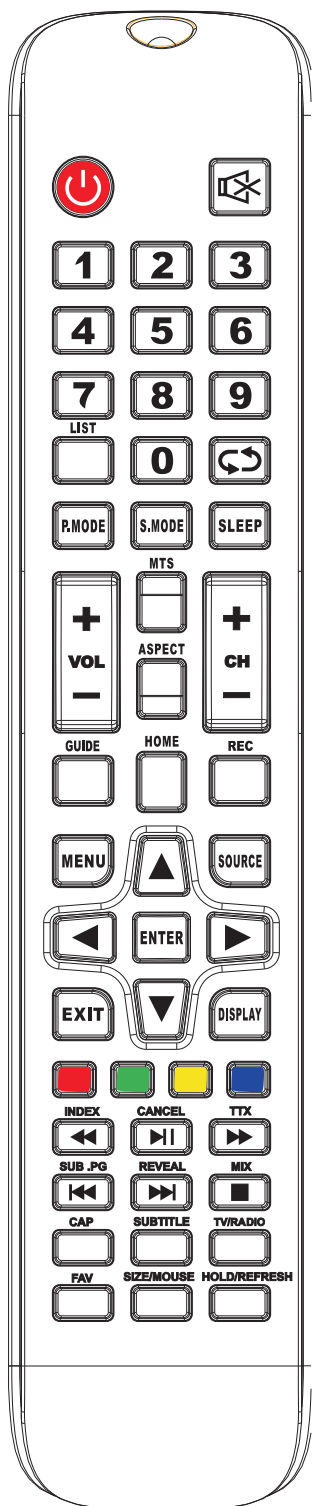

Ενεργοποίηση / Απενεργοποίηση τηλεόρασης



Απενεργοποιεί τον ήχο



Μετάβαση στο προηγούμενο κανάλι

S.MODE:

Μετάβαση στις ρυθμίσεις ήχου



Επιλογή χρονοδιακόπτη σβήσιματος

MENU:

Μετάβαση στο κεντρικό μενού ή μετάβαση στην προηγούμενη κατάσταση.



Επιλογή πηγής



Επιβεβαίωση επιλογής

FAV:

Προσθέτει ή αφαιρεί κανάλι από τα αγαπημένα

EXIT:

Βγαίνει από το τρέχον μενού ή λειτουργία

DISPLAY:

Εμφάνιση πηγής ή πληροφορίας προγράμματος.

V+:

Αύξηση έντασης ήχου

V-:

Μείωση έντασης ήχου

HOLD/ REFRESH: Τελετέξτ, Διατήρηση / Ανανέωση σελίδας

CAP:

Αποθηκεύει την τρέχουσα θέαση στο δίσκο του υπολογιστή.

PLAY/ PAUSE: Αναπαραγωγή/ Παύση μέσω USB

CANCEL:

Ακύρωση

FREEZE:

Πάγωμα εικόνας

STOP:

Σταμάτημα αναπαραγωγής αρχείων πολυμέσων.

MIX:

Εικόνα τηλεόρασης και TXT αναμιγνύονται

CH+:

Κανάλι πάνω

CH-:

Κανάλι κάτω

SET:

Ρύθμιση δικτύου

HOME:

Κεντρική σελίδα Android

ASPECT:

Ρύθμιση τύπου θέασης/ μέγεθος εικόνας

SIZE/ MOUSE: Μέγεθος γραμμάτων τελετέξτ. Ποντίκι.

SUBTITLE: Υπότιτλοι

BROWSER: Ιντερνετ

FF: γρήγορη κίνηση μπροστά μέσω USB

PREV: γρήγορη κίνηση πίσω μέσω USB

FR: προηγούμενο μέσω USB

NEXT: επόμενο μέσω USB

RECORD: εγγραφή

SUB.Pg: Πρόσβαση σε κωδικοποιημένη σελίδα

REVEAL: Τελετέξτ: εμφάνιση ή κρύψιμο σελίδων

INDEX: Τελετέξτ: αρχική σελίδα

TTX: Έναρξη τελετέξτ

# Άλλες Πληροφορίες

## Βοήθεια

Η τηλεόραση δεν ενεργοποιείται	Ελέγξτε αν είναι συνδεδεμένο το καλώδιο ρεύματος στην πρίζα. Αν το πρόβλημα επιμένει, αποσυνδέστε το καλώδιο από την πρίζα και συνδέστε το ξανά μετά από 60 δευτερόλεπτα. Στη συνέχεια ενεργοποιήστε ξανά την τηλεόραση.
Το σήμα είναι ασταθές	<ul style="list-style-type: none"> <li>«Διπλή» εικόνα: Η διπλή εικόνα (σαν φάντασμα) προκαλείται όταν το τηλεοπτικό σήμα ακολουθεί δύο διαδρομές. Η μία είναι η άμεση και η δεύτερη η έμμεση (το σήμα ανακλάται σε ψηλά κτήρια ή άλλα αντικείμενα). Αλλάξτε τη θέση ή τον προσανατολισμό της κεραίας για να βελτιώσετε τη λήψη.</li> <li>Αν χρησιμοποιείτε κεραία εσωτερικού χώρου, ενδέχεται η λήψη να μην είναι καλή. Αλλάξτε τη θέση ή τον προσανατολισμό της κεραίας για να βελτιώσετε τη λήψη. Αν δεν υπάρξει βελτίωση, χρησιμοποιήστε εξωτερική κεραία.</li> </ul>
Δεν εμφανίζεται εικόνα	<ul style="list-style-type: none"> <li>Ελέγξτε αν είναι συνδεδεμένη σωστά η κεραία στο πίσω μέρος της τηλεόρασης.</li> <li>Δοκιμάστε να αλλάξετε κανάλι για να δείτε αν υπάρχει πρόβλημα στην τηλεόραση.</li> </ul>
Εμφανίζεται εικόνα αλλά δεν ακούγεται ήχος	<ul style="list-style-type: none"> <li>Πιέστε το πλήκτρο αύξησης έντασης για να αυξήσετε την ένταση του ήχου.</li> <li>Έχετε επιλέξει σιγή του ήχου. Πιέστε MUTE για ακύρωση της σιγής.</li> </ul>
Ακούγεται ήχος αλλά υπάρχει σφάλμα στο χρώμα ή δεν εμφανίζεται εικόνα.	<ul style="list-style-type: none"> <li>Αυξήστε τη φωτεινότητα και την αντίθεση.</li> </ul>
Εμφανίζονται «χιόνια» και παρεμβολές.	<ul style="list-style-type: none"> <li>Ελέγξτε αν είναι συνδεδεμένη η κεραία στο πίσω μέρος της τηλεόρασης.</li> </ul>
Ακανόνιστοι κυματισμοί στην οθόνη	<ul style="list-style-type: none"> <li>Προκαλούνται συνήθως από τοπικές παρεμβολές, όπως αυτοκίνητα, σεσουάρ κ.ά. Απενεργοποιήστε τη συσκευή που προκαλεί την παρεμβολή.</li> </ul>
Το τηλεχειριστήριο δεν λειτουργεί	<ul style="list-style-type: none"> <li>Βεβαιωθείτε ότι έχετε αφαιρέσει την πλαστική συσκευασία του τηλεχειριστηρίου. Προσπαθήστε να φέρετε το τηλεχειριστήριο πιο κοντά στην τηλεόραση. Ελέγξτε αν οι μπαταρίες έχουν ενέργεια ή αλλάξτε μπαταρίες.</li> <li>Η τηλεόραση θα μπει σε κατάσταση αναμονής αν δεν λάβει κανένα σήμα από το τηλεχειριστήριο για το επιλεγμένο χρονικό διάστημα.</li> </ul>
Δεν υπάρχει σήμα (Σε σύνδεση με υπολογιστή)	<ul style="list-style-type: none"> <li>Ελέγξτε αν είναι συνδεδεμένο σωστά το καλώδιο VGA.</li> <li>Παρακαλούμε ελέγξτε μήπως έχει τσακίσει το καλώδιο.</li> </ul>
Υπάρχει κάθετη γραμμή (Σε σύνδεση με υπολογιστή)	<ul style="list-style-type: none"> <li>Μπείτε στο κεντρικό μενού. Χρησιμοποιήστε τη ρύθμιση κάθετης θέσης για να εξαλειφθεί η κάθετη γραμμή.</li> </ul>
Υπάρχει οριζόντια γραμμή (Σε σύνδεση με υπολογιστή)	<ul style="list-style-type: none"> <li>Ρυθμίστε την οριζόντια θέση μέσω του μενού για να εξαλείψετε τη γραμμή.</li> </ul>
Η οθόνη είναι πολύ φωτεινή ή σκοτεινή (Σε σύνδεση με υπολογιστή)	<ul style="list-style-type: none"> <li>Αυξήστε τη φωτεινότητα και την αντίθεση μέσω του μενού.</li> </ul>
Δεν υπάρχει απόκριση κατά τη σύνδεση με υπολογιστή	<ul style="list-style-type: none"> <li>Ελέγξτε αν η κάρτα γραφικών του υπολογιστή είναι ρυθμισμένη σε ανάλυση που να υποστηρίζεται από την τηλεόραση.</li> </ul>
Εμφανίζεται γραμμή κατά τη σύνδεση RCA	<ul style="list-style-type: none"> <li>Χρησιμοποιήστε καλώδιο καλής ποιότητας.</li> </ul>
Το πρόβλημα επιμένει	<ul style="list-style-type: none"> <li>Αποσυνδέστε το καλώδιο ρεύματος, περιμένετε 30 δευτερόλεπτα και στη συνέχεια συνδέστε το ξανά. Αν το πρόβλημα επιμένει, επικοινωνήστε με την τεχνική υποστήριξη της εταιρείας μας.</li> </ul>

Μην προβάλλετε στην οθόνη της τηλεόρασης στατική εικόνα για μεγάλο χρονικό διάστημα. Θα πρέπει να προστατεύετε την οθόνη. Εάν προβάλλετε στην οθόνη στατική εικόνα υψηλής αντίθεσης για μεγάλο χρονικό διάστημα, ενδέχεται να αποτυπωθεί «σκιά» στην οθόνη.

## Τεχνικά Χαρακτηριστικά

Μέγεθος οθόνης	Κατανάλωση ενέργειας (LED)	
24"	36W	Οδηγίες Χρήσης × 1 Τηλεχειριστήριο ×1 Καλώδιο ρεύματος ×1 Μπαταρίες AAA ×2
32"	56W	
39"	60W	
40"	70W/90W	
43"	70W/80W/90W	
50"	100W	
55"	110W/135W	
58"	120W/135W	
65"	160W	
70"	180W	
75"	185W/250W	